



Seating the Way You Want It

Lesro Industries, Inc.
1 Griffin Road South
Bloomfield, CT
06002

Phone 860.243.3226
Fax 860.243.5392
www.lesro.com

Assembly Instructions

Waterfall Guest, Oversize, Bariatric & Loveseat

Tools required: Allen wrenches (included in hardware pack)

Note: These instructions are intended for various models and configurations. Your products may not look exactly as those shown in the diagrams.

Recommendation: Retighten all bolts on a seasonal basis to ensure your seating product remains strong and stable for many years of use.

Weight Capacities: Guest - **400 lbs**; Oversize - **500 lbs**; Bariatric - **750 lbs**; Loveseat - **550 lbs**.

Parts List

Leg Frame, Left
Leg Frame, Right
Back Support Bar
H-Frame Seat Support
Back Cushion
Seat Cushion

Hardware Pack

3/8" Allen Bolts, 2 pcs.
5/8" Allen Bolts, 4 pcs.
2" Allen Bolts, 8 pcs.
Small Allen Wrench
Large Allen Wrench

1. Unpack and identify all parts.
2. Place one of the leg frames on a table or floor, as shown in figure 1. Be sure the surface is soft and clean to prevent scratching. Slide the back support bar into the slot in the leg frame and secure with 3/8" Allen bolt. Tighten securely.
3. Align channels in back cushion with back support bar and back stem and slide back cushion into place, as shown in figure 2.
4. Slide H-frame over front stem, as shown in figure 3.
5. Aligning front stem with front H-frame tube, back stem with channel in back cushion, and back support bar with slot in leg frame, slide the second leg frame into place, as shown in figure 4.

(continued on page 2)

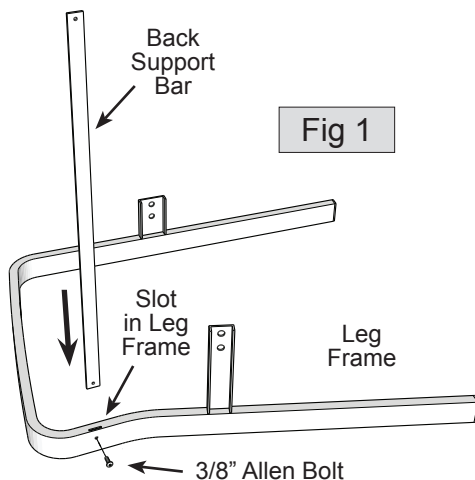


Fig 1

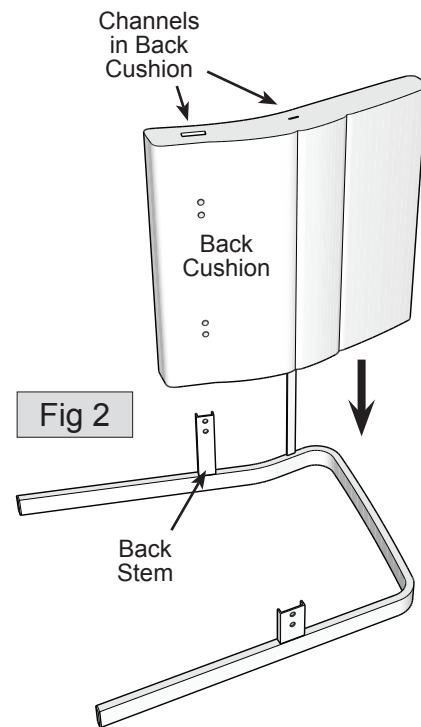


Fig 2

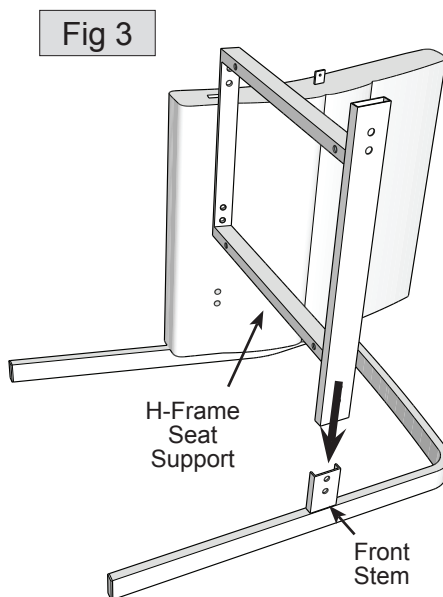


Fig 3

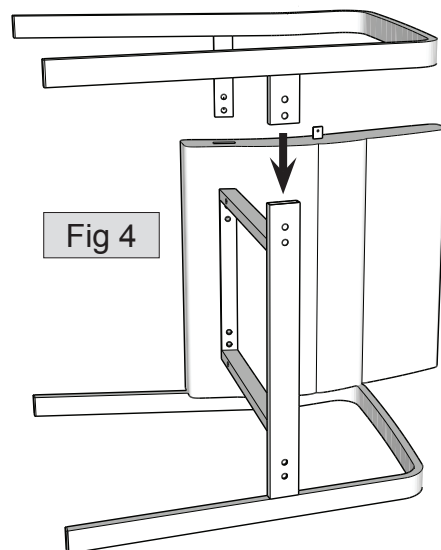


Fig 4

Thank you for purchasing a Lesro product.
Need assistance with assembly? Call Lesro customer service 1-800-275-7545.
Visit us on-line at www.lesro.com



Seating the Way You Want It
Lesro Industries, Inc.
1 Griffin Road South
Bloomfield, CT
06002

Assembly Instructions

Waterfall Guest, Oversize, Bariatric & Loveseat

Recommendation: Retighten all bolts on a seasonal basis to ensure your seating product remains strong and stable for many years of use.

Weight Capacities: Guest - **400 lbs**; Oversize - **500 lbs**; Bariatric - **750 lbs**; Loveseat - **550 lbs**.

(continued from page 1)

6. As shown in figure 5:

A. Insert 2" Allen bolts through holes in H-frame back plate and through holes in back cushion to secure into threaded holes in back stems. Leave bolts slightly loose for now.

B. Secure front tube of H-frame to front stems using 1/2" Allen bolts. Leave bolts slightly loose for now.

C. Secure the back support bar to the leg frame using 3/8" Allen bolt. Tighten securely.

7. Attach seat cushion using 2" Allen bolts, as shown in figure 6.

8. Tighten all 14 bolts securely.

11. Your chair is now assembled and ready to use.

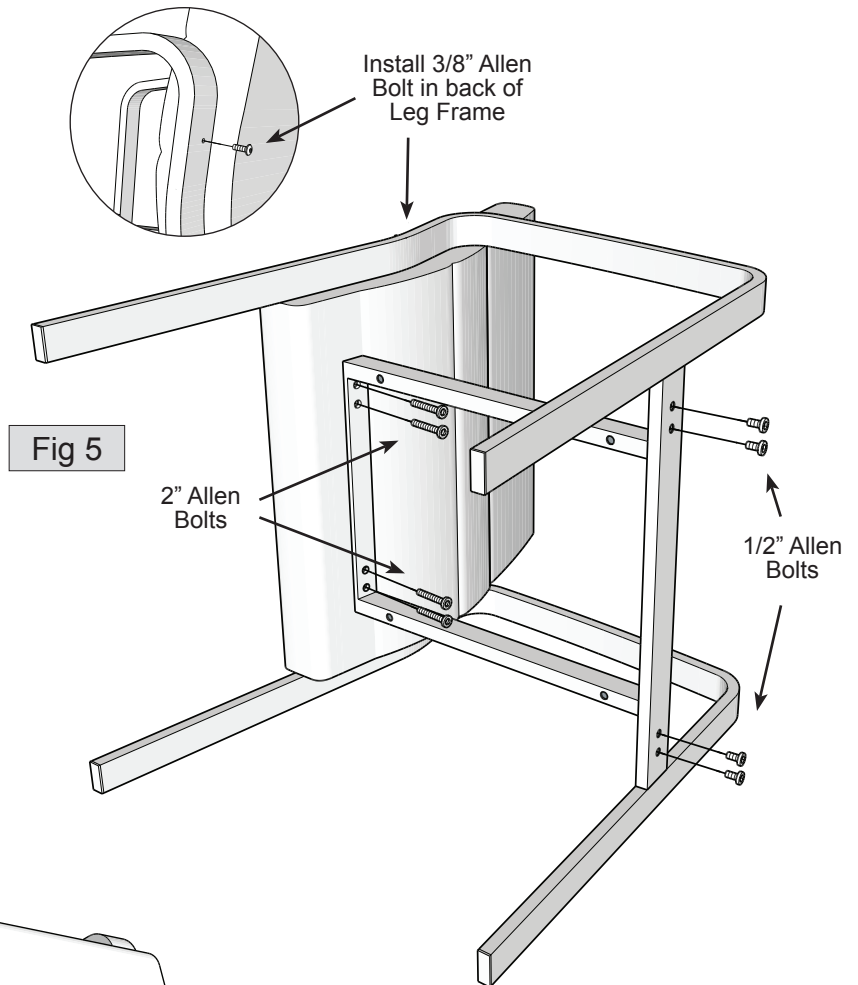


Fig 5


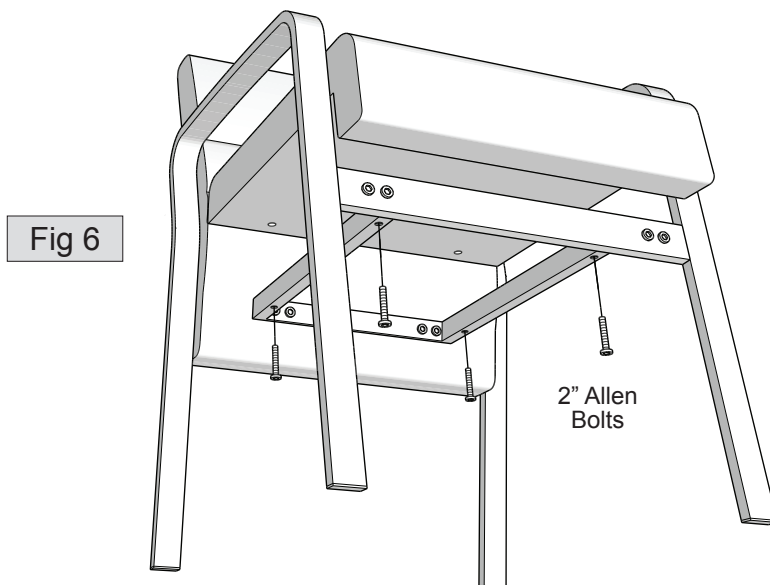


Fig 6

2" Allen Bolts

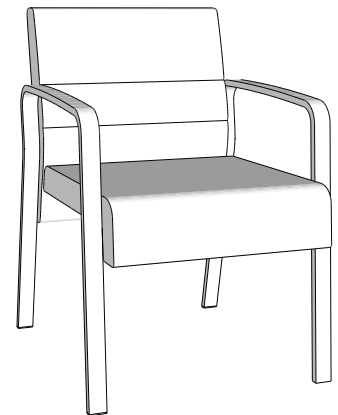

Thank you for purchasing a Lesro product.
Need assistance with assembly? Call Lesro customer service 1-800-275-7545.
Visit us on-line at www.lesro.com